

Contact Information

USA	
Phone:	1.800.343.4912
Fax:	503.454.5777
E-Mail:	info_service@Coherent.com
Europe	
Phone:	+49-6071-968-0
Fax:	+49-6071-968-499
E-Mail:	info_service@Coherent.com
International	
Phone:	503.454.5700
Fax:	503.454.5777
E-Mail:	info_service@Coherent.com

For the latest Customer Service information, refer to our website: www.Coherent.com.

Coherent and the Coherent Logo are registered trademarks of Coherent, Inc. FieldMaxII-TO is a trademark of Coherent, Inc.

FieldMaxII-TO™ Quick Start Guide
 © Coherent, Inc., 11/2008, (RoHS). Printed in the U.S.A.
 Part No. 1086222, Rev. AD

Quick Start Guide FieldMaxII-TO™ Laser Power Meter



This guide presents a “mini-tutorial” that explains how to connect a sensor to your FieldMaxII-TO meter and begin taking measurements within minutes. For in-depth information about the FieldMaxII-TO meter, refer to the *FieldMaxII-TO User Manual* (1086239).

Software Installation

For complete software installation instructions, refer to the *FieldMaxII™ Software Installation Quick Start Guide* (1096359) that shipped with your product.

Before using the procedure explained in this guide, read the following safety warnings.



Follow all laser safety procedures. The laser must be blocked or switched OFF before beginning the procedures described in this guide.




Power to the FieldMaxII-TO instrument must be OFF before beginning the procedures described in this guide.




Do not exceed the power density limits of the sensor.

Tuning a Laser With a Thermopile or Optical Sensor

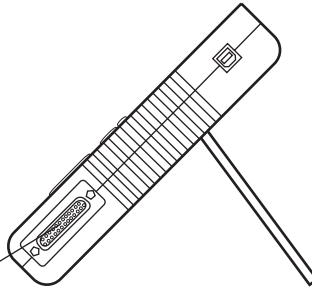

1

Connect a thermopile or optical sensor to the FieldMaxII-TO 25-pin connector.

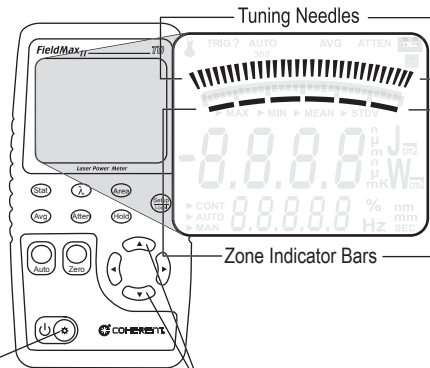

2

Apply power to the instrument.


3

Use the Up and Down arrows to select the appropriate measurement range (instrument is automatically placed in Manual Ranging).

Tuning is shown on the display using tuning needles and zone indicator bars. The tuning needles (at the top of the display) are now zoomed in to enhance laser tuning. For detailed information about Tuning mode, refer to the *FieldMaxII-TO User Manual*.


Measuring Power With a Thermopile or Optical Sensor

The following illustration outlines how to take a power measurement using a thermopile or optical sensor.

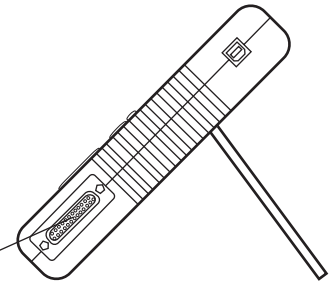

1

Connect a thermopile or optical sensor to the FieldMaxII-TO 25-pin connector.

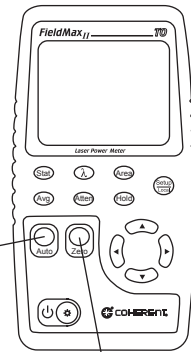

2

Press the Auto button to turn on Auto Ranging.

3

Block the beam and then press the Zero button to set the baseline for your new measurement.

4

Unblock the beam, take the measurement, and observe the result on the display.