150 200

# **PowerLine F Series**

## **Cost-Effective Laser Markers**

PowerLine F laser markers combine an infrared fiber laser, a highperformance scanner and beam delivery optics, drive electronics, and powerful control software to yield a fast, flexible, and cost-effective marking platform. They feature a compact, modular design, and are built to customer specification utilizing a wide choice of laser sources. This makes them an effective solution for producing high-visibility marks in numerous applications on metals, plastics and other organics. Their proprietary software supports a number of sophisticated functions, including 3D marking, and enables marking of variable data (bar codes, serial numbers).

#### **FEATURES & BENEFITS**

- Air-cooled
- Controlled by customer supplied PC, PLC, or fieldbus
- 19" rack-mount control electronics
- Versatile configuration options
- Low operating cost

#### APPLICATIONS

- Marking of Organic Materials and Metals
- Engraving
- On-the-Fly Marking
- Label Marking and Kiss Cutting
- SmartMap3D Freeform Marking
- High-Precision Marking





MODEL	PL F 20-1064	PL F 30-1064	PL F 50-1064	PL F 100-1064	PL F 20 Varia	PL F 50 Varia
Laser Type	Fiber					
Wavelength (nm)	1064					
Average Power (W)	19	28	47	95	19	47
Pulse Energy (mJ)	<0.95					
Frequency Range (kHz)	20 to 100	30 to 100	50 to 200	5.1 to 200	2 to 1000	2 to 10001
Pulse Width (ns)	100 (at 20 kHz)	100 (at 30 kHz)	120 (at 50 kHz)	100 (at 100 kHz)	4 to 2001	1 to 1201
M <sup>2</sup>	<2.0					
Beam Diameter (mm)	7.5 ±1.5	7.5 ±1.5	5.0 ±1.0	5.0 ±1.0	5.0 ±1.0	5.0 ±1.0
Cable between Laser Head and Supply Unit <sup>2</sup> (m)	2.6	2.6	2.6	2.6	1.65	1.65
Weight (kg) Laser Head Supply Unit	7.5 / 4.5 <sup>3</sup> 22	7.5 / 4.5 <sup>3</sup> 22	7.5 25	7.5 27	7.5 21	7.5 25
Fiber Laser Type	Yb-doped fiber laser					
Cooling	Air cooling. Ambient operating temperature: +15 to +35°C					
Scanners	Range of scanners for general marking, on-axis alignment, high-precision marking (digital encoder)					
Optical Z-axis	Yes (option)					
Marking Field Size	Between 60 mm x 60 mm and to 600 mm x 600 mm depending on f-Theta objective					
Positioning Help Laser	Standard housing: Yes / Short housing: No					
Physical Dimensions	Physical dimensions and working distance of the laser marker depend on the detailed configuration. Please refer to the technical drawing.					
Mounting of Laser Marker	Horizontal, vertical, and upside-down mounting is possible					
Supply Unit	19" rack mount unit, height: 3 rack units (PowerLine F 100-1064: 4 rack units)					
Interfaces (PLC control)	Parallel interface (digital I/Os). Encoder devices can be connected to differential I/Os.					
Interfaces <sup>4</sup> (PC control)	LAN (TCP/IP), RS-232 <sup>5</sup>					
Fieldbus Control <sup>6</sup>	Profibus DP, Profinet IO					
Variable Data	Keyboard input, local file (lot file), barcode reader, via LAN (TCP/IP) <sup>4</sup> , Matrix objects					
Standard Software	Visual Laser Marker (VLM), Visual Marking Controller (VMC2), Laser Console, RCU.exe					
Marking Objects	Vector graphics, text, logos, ring, bitmap, banding					
Barcodes	GS1 DataBar, Code 39, Code 128, EAN8, EAN13, UPC-A, UPC E, BookLan and others					
2D Codes	ECC200, Code 49, Micro-PDF417 and other data matrix and QR codes					
Optional Software Features	MJC (Marker Job Control), HK (Host Coupling), Marking-on-the-Fly (MoF), SmartMap3D, CAD Extension, AI, PDF, and PS Import, SECS/GEM					
OS-single Board PC	Windows 10					
Certificates	PowerLine F laser markers are certified according to the following international standards: EN 60825-1:2014, EN 55011:2009/A1:2010, EN 61000-6-4:2007, EN 61000-6-2:2005, EN 61000-3-2:2014, EN 61000-3-3:2013, 47 CRF Part 18 ICES-003 Issue 4:2004 and fulfill the CDRH (radiation) standard.					

Pulse width is selectable. PowerLine F 50 Varia: Available frequency range depends on selected pulse width.
The fiber laser module is mounted inside the supply unit. The fiber link between marker head and laser module cannot be unplugged.
Weight of PowerLine F 20-1053 and PowerLine F 30-1064 with short housing.
Requires Host Coupling (HK), Marker Job Control (MJC), or SECS/GEM software feature.
Requires an RS-232-to-USB-adapter.
The field we interface in provided here fold the software here.


6 The fieldbus interface is provided by a fieldbus coupler. The fieldbus coupler is connected to the supply unit by Fast Ethernet connection.




.....


### **MECHANICAL SPECIFICATIONS**

#### PowerLine F 20-1064 / 30-1064 / 50-1064 / 100-1064 / 20 Varia / 50 Varia

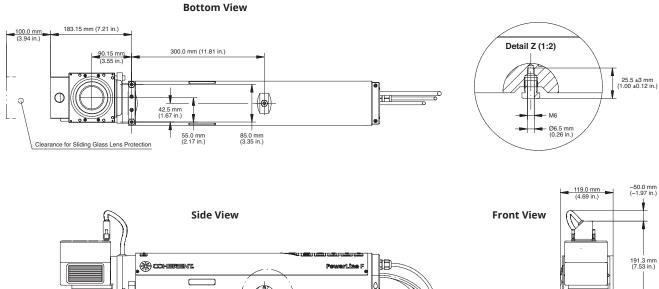

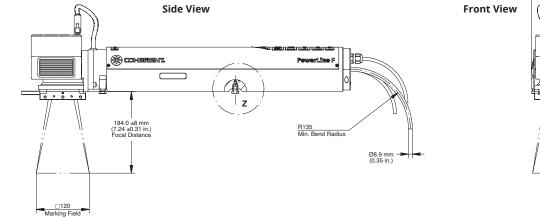


Top View

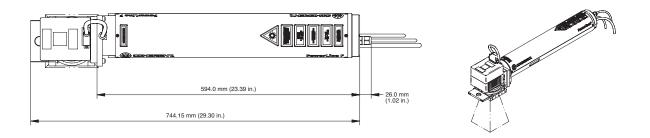



### **MECHANICAL SPECIFICATIONS**

PowerLine F 20-1064 / 30-1064 (short housing / no positioning laser)

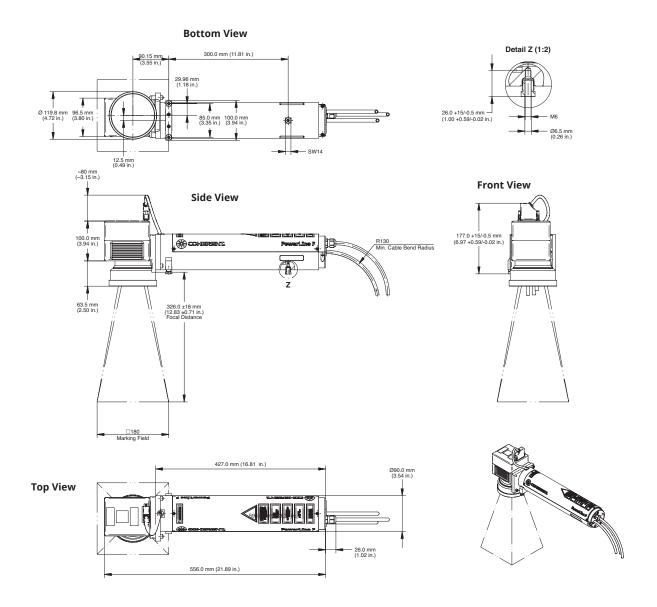



Coherent, Inc., 5100 Patrick Henry Drive Santa Clara, CA 95054 p. (800) 527-3786 | (408) 764-4983 f. (408) 764-4646

#### tech.sales@coherent.com www.coherent.com

Coherent follows a policy of continuous product improvement. Specifications are subject to change without notice. Coherent's scientific and industrial lasers are certified to comply with the Federal Regulations (21 CFR Subchapter J) as administered by the Center for Devices and Radiological Health on all systems ordered for shipment after August 2, 1976.

Coherent offers a limited warranty for all PowerLine F Series Lasers. For full details of this warranty coverage, please refer to the Service section at www.coherent.com or contact your local Sales or Service Representative. MC-003-20-0M-1020Rev A Copyright ©2020 Coherent, Inc.